


EASY ROLLER *compact*

Operating instructions

Congratulations on your purchase of the EASY ROLLER Compact.

These instructions will give you useful tips for using the unit and help you solve any problems that you may experience. Please read the instructions carefully before using the EASY ROLLER for the first time.

1. Functions:

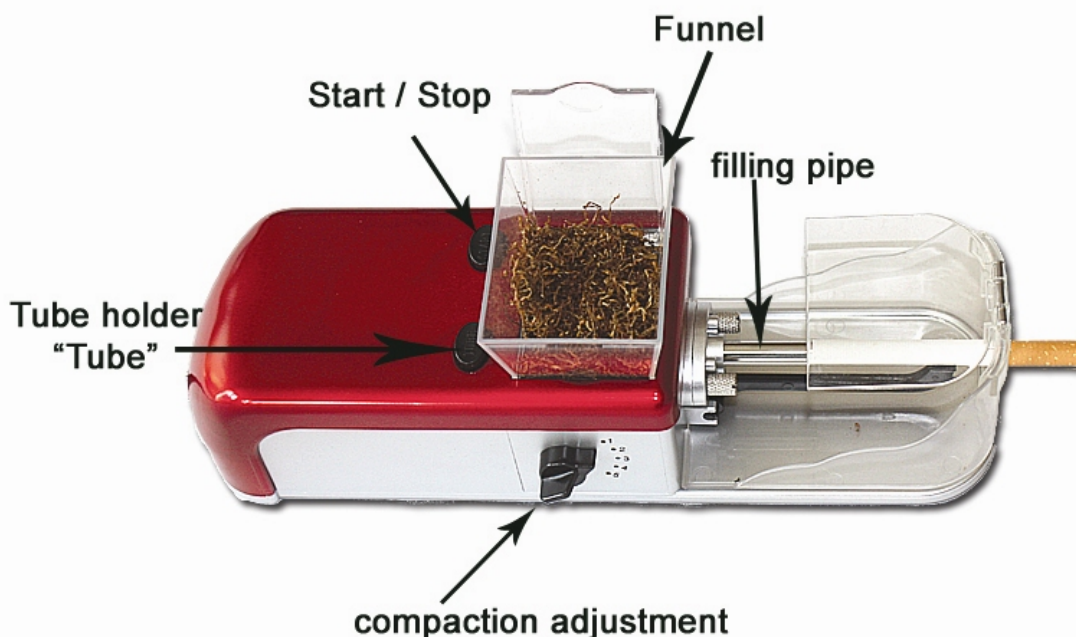

2. Preparation:

Ensure that the tobacco is not too moist. Start with small quantities in order to become familiar with using the machine. Before you start, spread the tobacco out evenly, for example on a piece of newspaper or similar. Make sure that the tobacco is not too damp. Tobacco from a newly opened package should be removed and allowed to dry out a little. Spread the tobacco out so that it has a loose consistency and does not form lumps.

3. Operation

Open the tobacco inlet and fit the funnel attachment over it. Fill the funnel with tobacco. Press the Tube button; the support arm under the filling tube will move down. Slide in a filter tube in pressed position until it touches the filling pipe, then release the button.

In the next step fill the tobacco inlet. We recommend that you start with small quantities of tobacco until you are confident in using the machine.

Set the required compaction density with the adjustment knob. This offers five levels, level 1 the lowest density and level 5 the highest. We recommend that you begin with level 2. You should experiment with this adjustment knob until you find your optimum setting.

Now start the machine by pressing the Start button until the filter tube is filled with tobacco and falls away from the filling pipe. Avoid leaving the machine running after this to prevent excess tobacco flying out of the pipe.

Problems and solutions:

1. The filling pipe gets hot.

When this happens, stop filling cigarettes and let the machine run empty to remove all tobacco residues from the pipe. This is important so that tobacco residue in the pipe does not bake to the metal.

Let the machine cool down before reusing.

2. The machine clogs and the filling screw stops turning.

The motor has a built-in overload protection. When the machine becomes blocked, this shuts off the motor out for 30 minutes. Loosen the two screws near the filling tube and remove the tube forwards from the machine. Clean any tobacco residues from the screw (you can pull the screw out of the motor block for this purpose) and clean the inside of the filling tube with the brush provided.

Once cleaned, push the tube and mounting carefully onto the screw and fix it back in place with the two screws.

3. The screw is faulty

One replacement screw is supplied with the machine. You can also purchase further screw replacements from your dealer.

Loosen the two screws next to the filling pipe, remove the filling pipe from the machine and remove the screw from the motor block. Fit the replacement screw in its place. Then push the tube and mounting carefully onto the screw and fix it back in place with the two screws.

Important:

Always clean the machine with a dry cloth - never with water.

Use the cleanest possible tobacco and remove hard or coarse stems.

When you have finished rolling, always let the machine run empty without a filter tube until all tobacco residue is removed from the filling tube.

Clean the filling tube and screw regularly. Loosen the two screws by the filling tube and remove tube from the machine. Clean the inside of the tube with the brush provided. Remove any residue from the screw.

After cleaning, push the tube and mounting carefully onto the screw and fix it back in place with the two screws.

The motor stops and will not start again>

Unplug the unit from the electricity supply. It is possible that tobacco residue has found its way into the housing and may have blocked the switch. Turn the unit over, loosen the four screws on the underside and remove the base plate. Remove any dust and tobacco, ideally using a vacuum cleaner. Then replace the base plate and fix with the four screws.

Should it be necessary to return the unit, please ensure that it is well packed, preferably in its original packaging.

We assume no liability for any damage caused by cigarettes.

The statutory warranty terms apply.